*PL2200 Maintenance





*Customers can put some grease on pivot points(red circle place), with brass or gunmetal bushings.






* Let's maintain your machine!

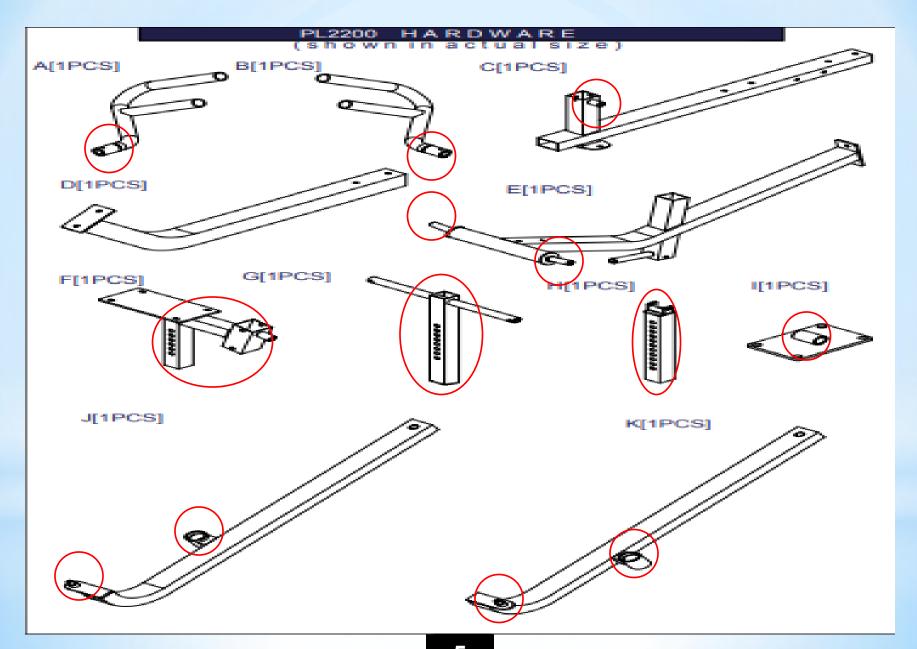


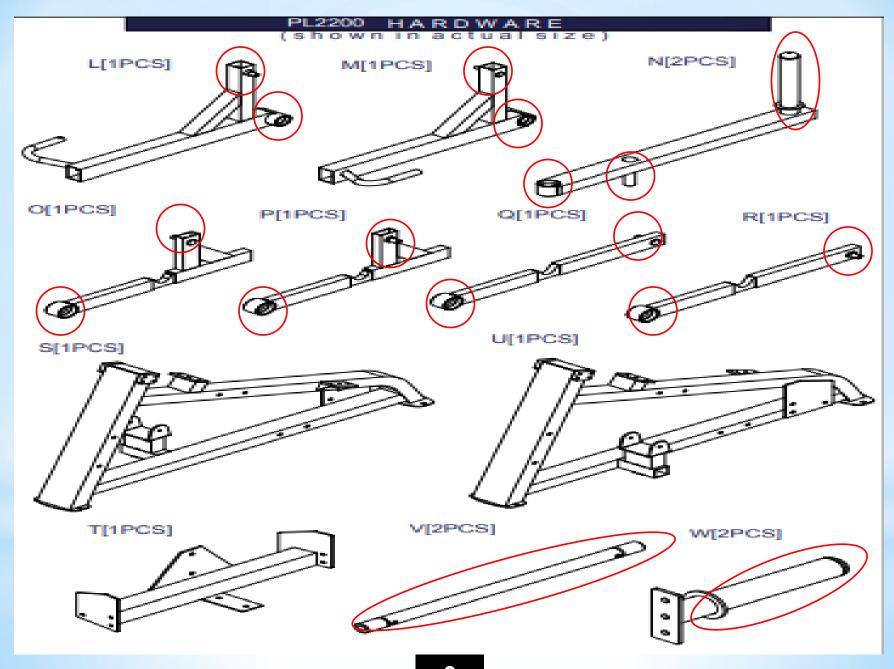



PL2200 HARDWARE (shown in actual size) X[1PCS] Y[1PCS] Z[2PCS] Z2[3PCS] Z1[2PCS] Z3[1PCS] 8313066 8313082 8220276 Z5[1PCS] Z4[1PCS] 9111073 9121078 Z8[2PCS] 8313246 Z6[4PCS] 8312062 Z7[4PCS] 8313243 Z9[1PCS] Z10[2PCS] 8360184 8830023




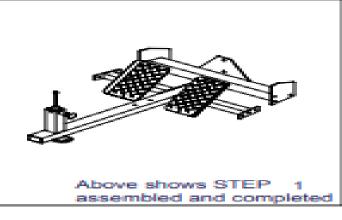


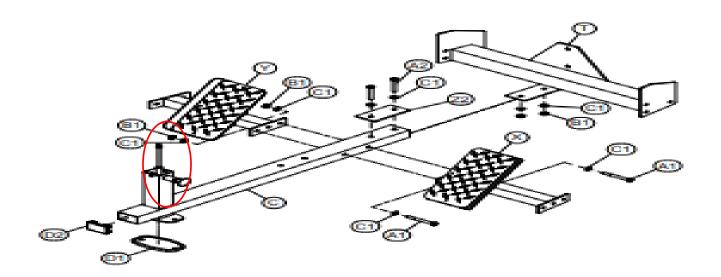

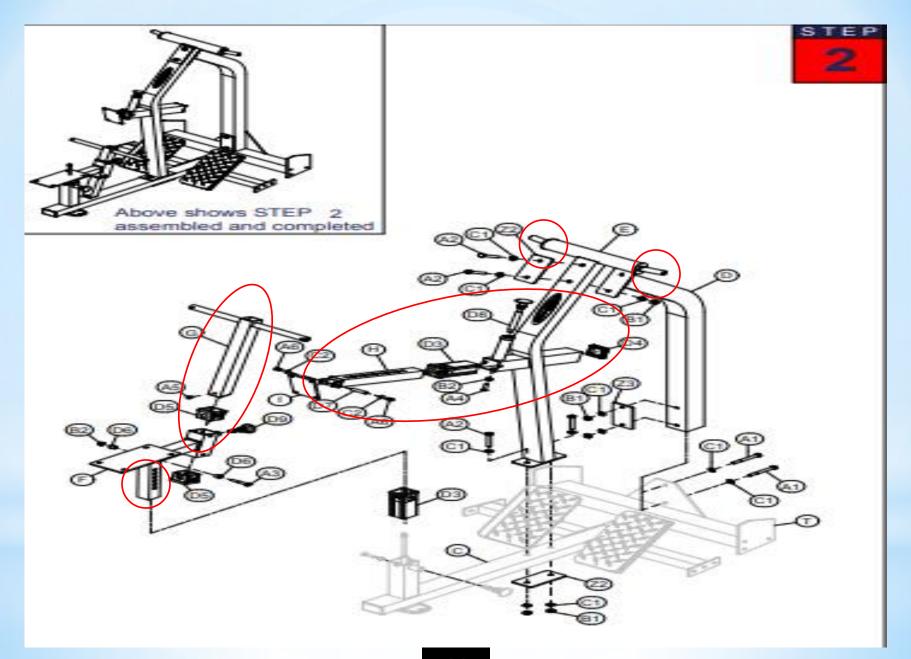


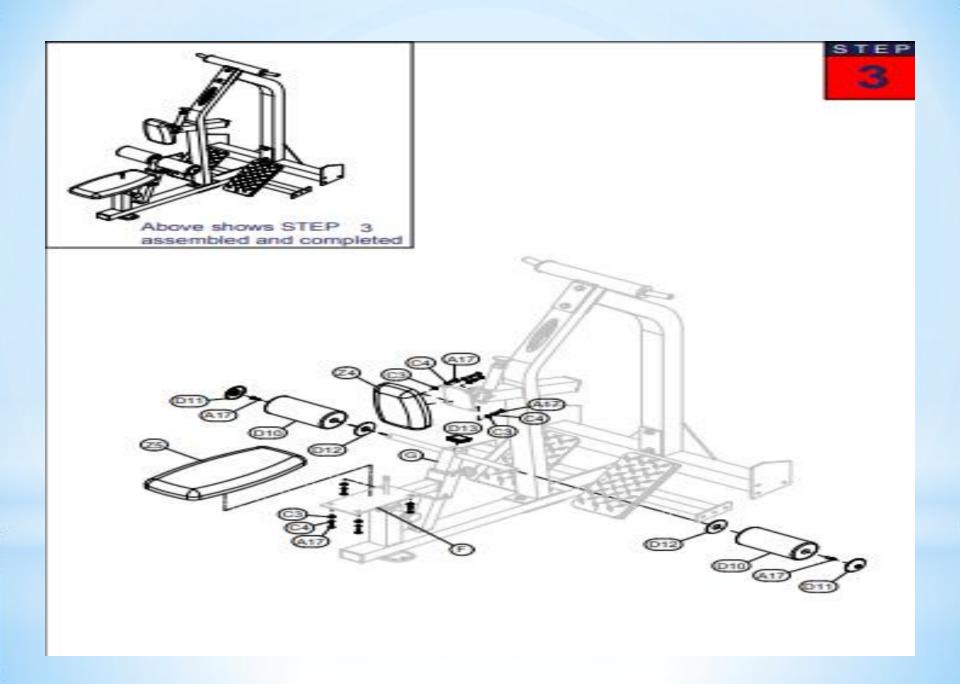


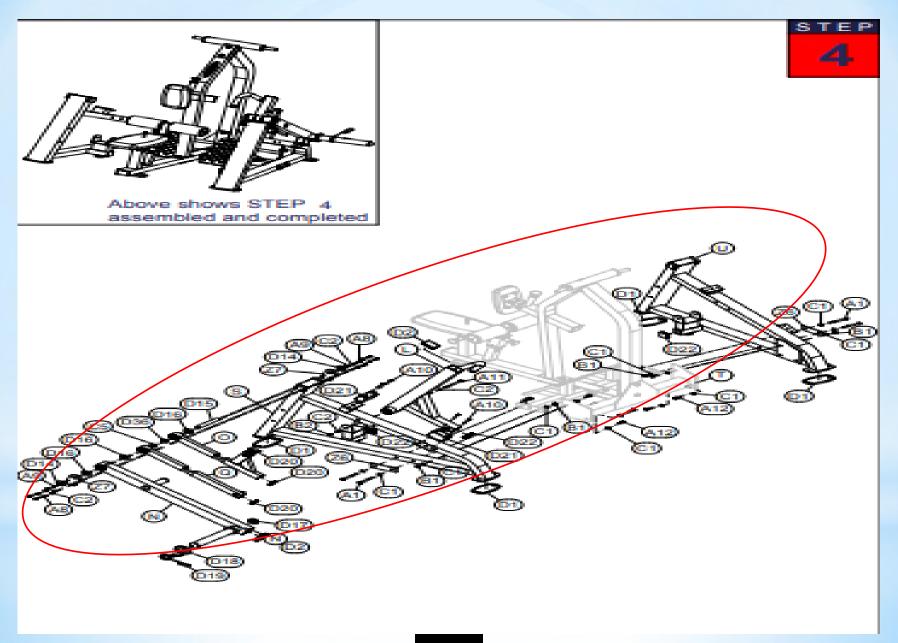


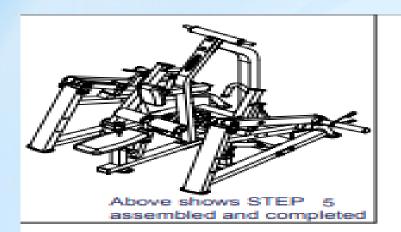





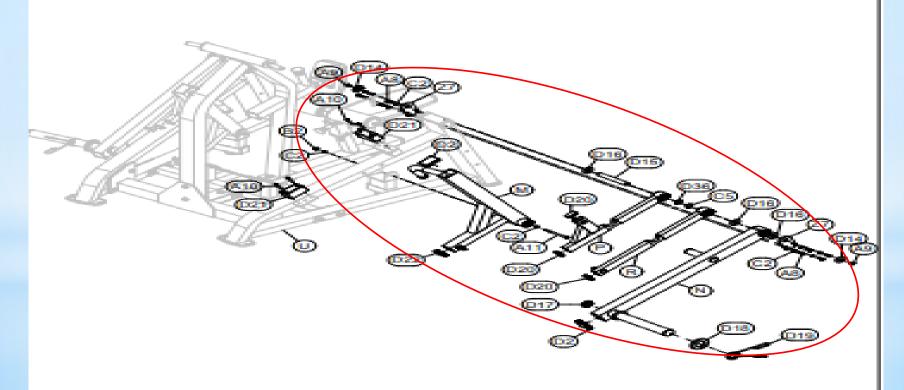

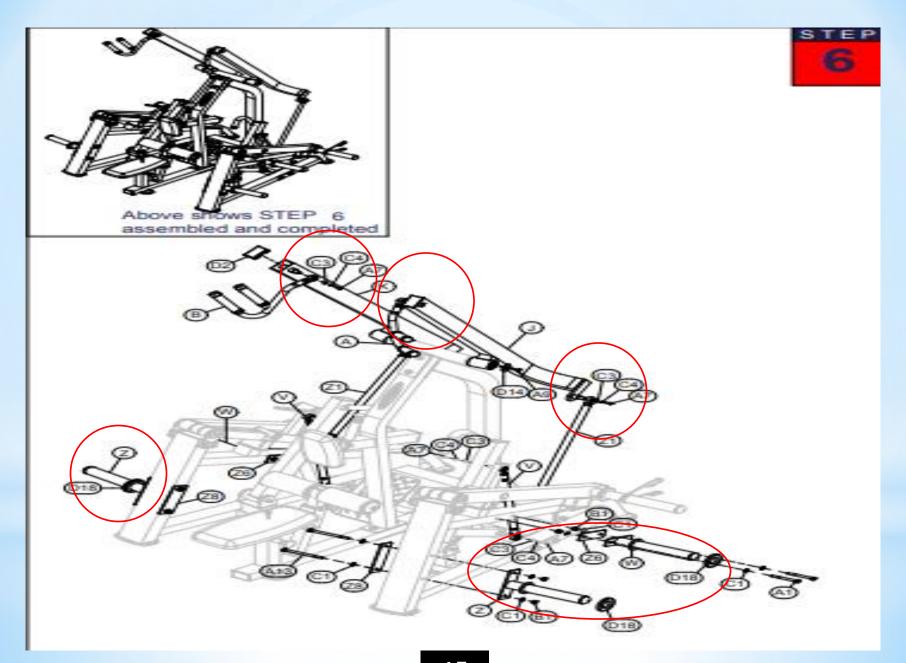

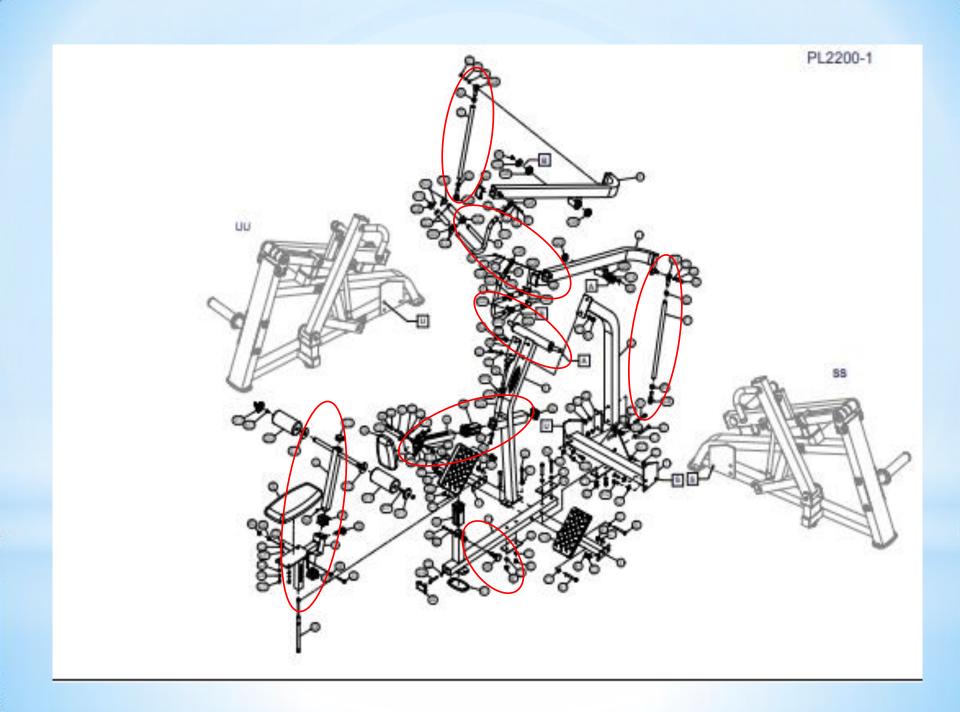

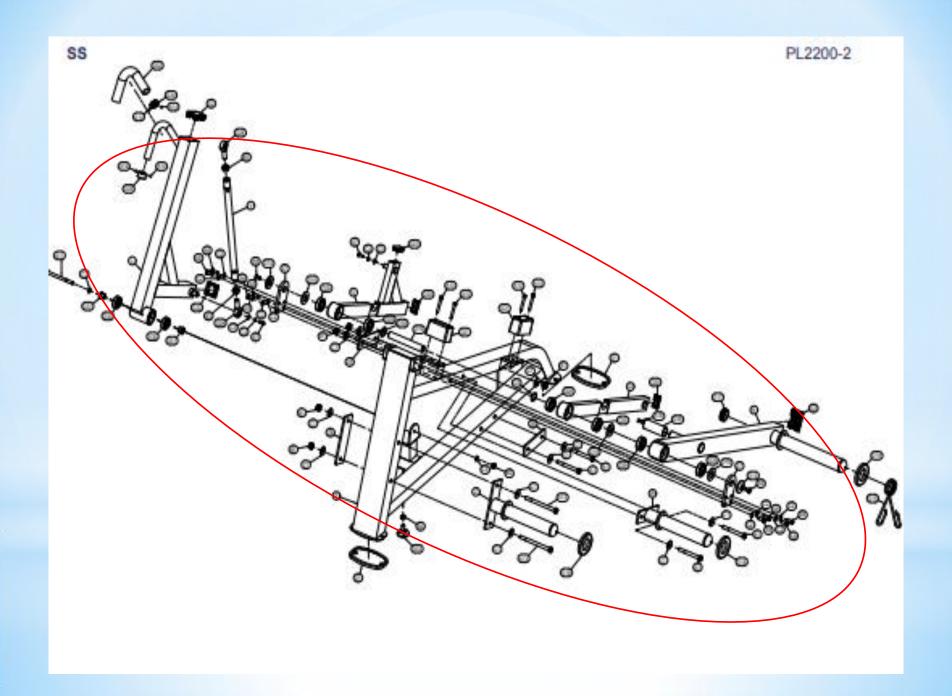

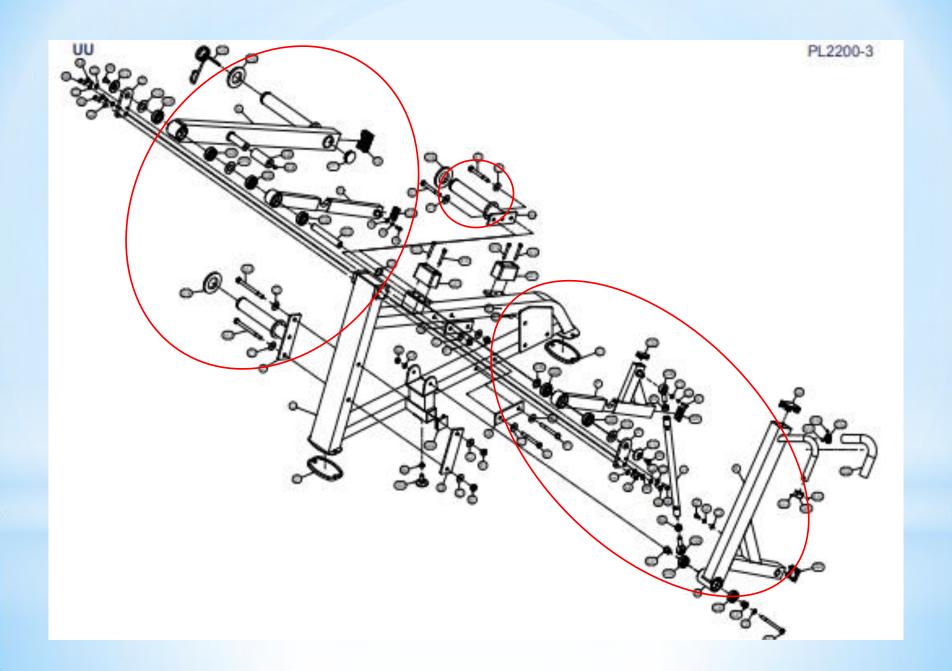

*Well done!

