

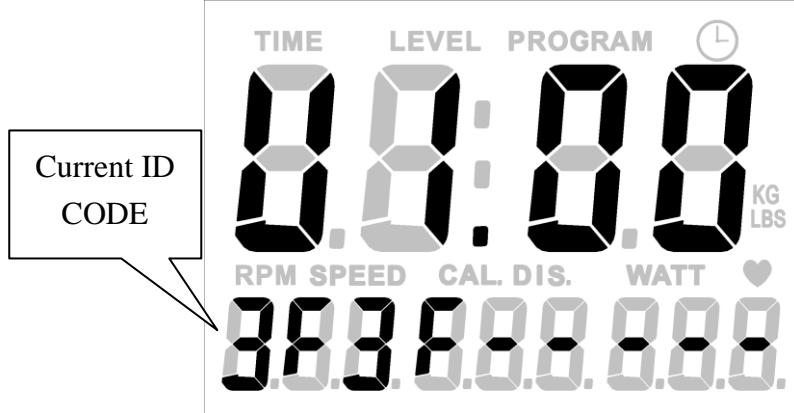


(CS1W/CS2W) Frequency matching.

1. When console could not receive the info, it indicates the console does not match with the transmitter.
2. Press 『▲』 key and 『▼』 key simultaneously for three seconds → go into frequency matching (Initial display shows the version of the program and the current ID CODE).

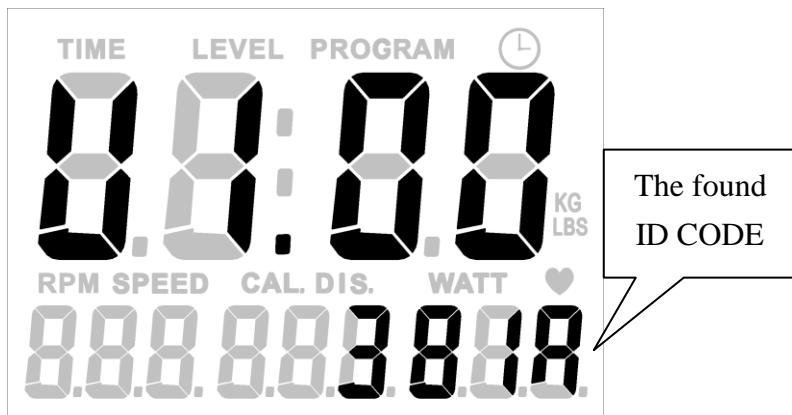

3. Remove the batteries of the transmitter and install again (To prevent the transmitter at suspension).
4. Press and hold 『SW2』 key on the transmitter, wait for the console to search for the transmitter. Release key 『SW2』 when console shows the found ID CODE.

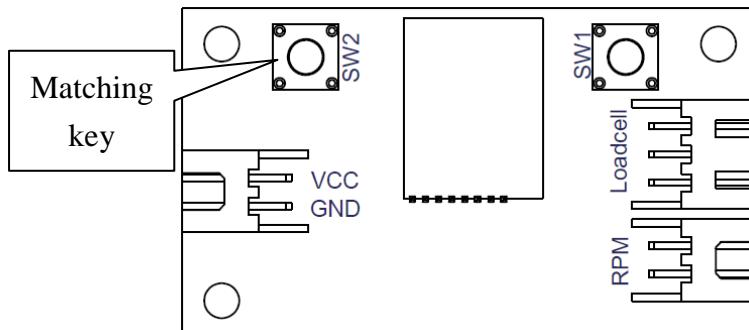

5. Program will automatically reset when matching is done.
6. Console will be suspended and cancel the matching if transmitter is not found in continual 60 seconds.